

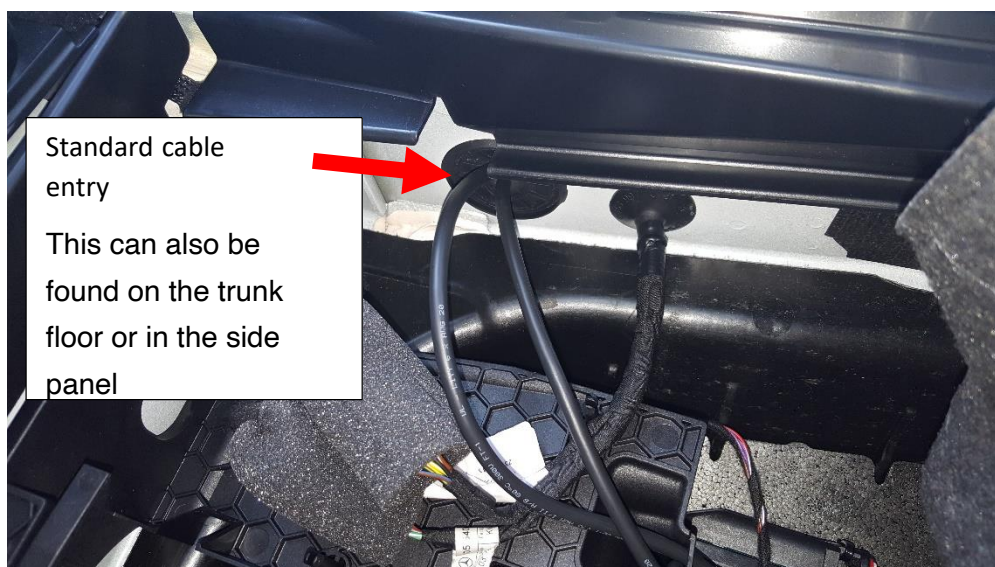
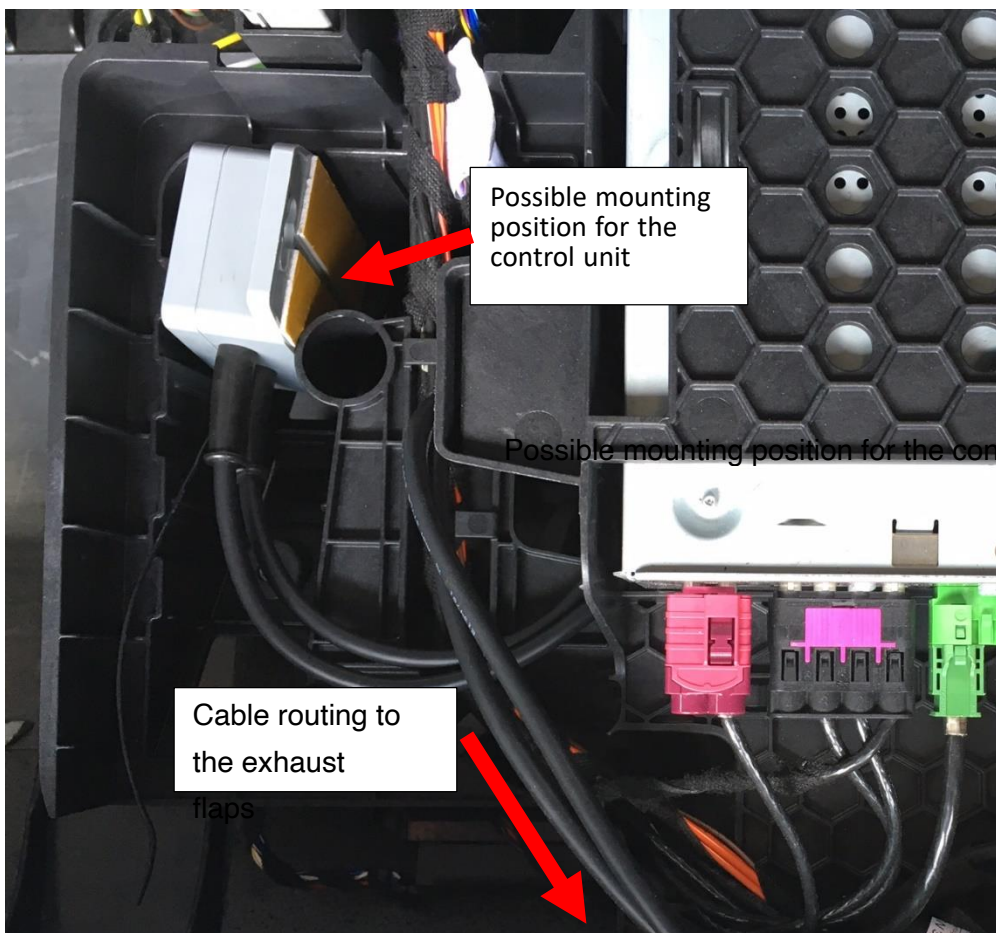


Installation Guide

Flap control RX1 and RX2 connection directly to the flaps The following pictures are for guidance only. For installation video of the GLC and similar click [HERE](#)

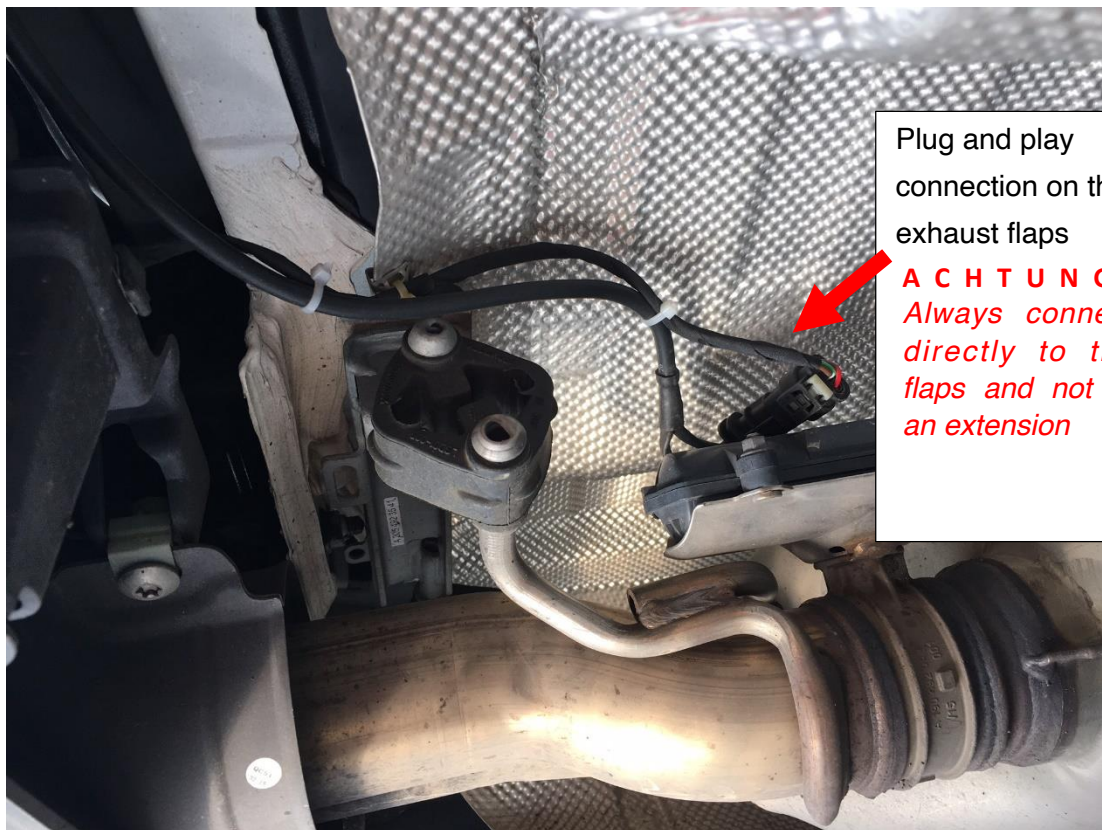

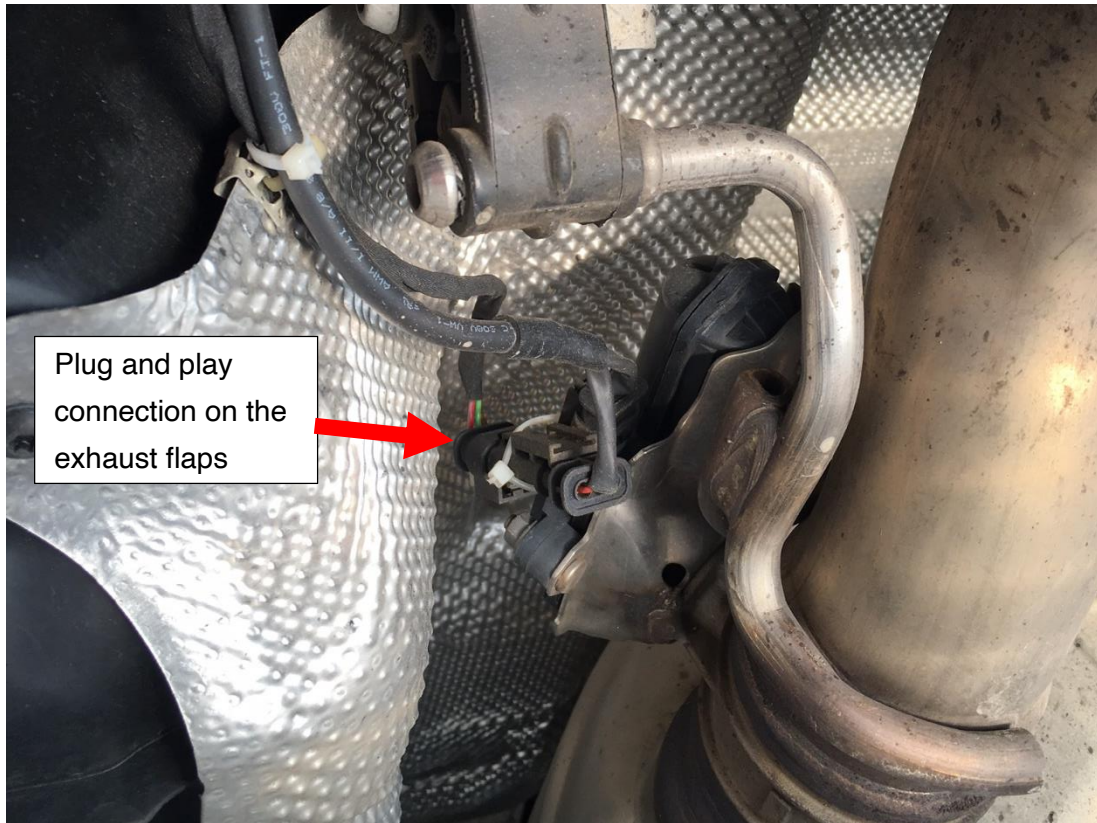

Disconnect the wire harness at the valve motor body and insert the ASR harness at this point. DO NOT connect to the extension cable to prevent errors and loss of power. If in doubt please watch the video