


The device offers the following modes:

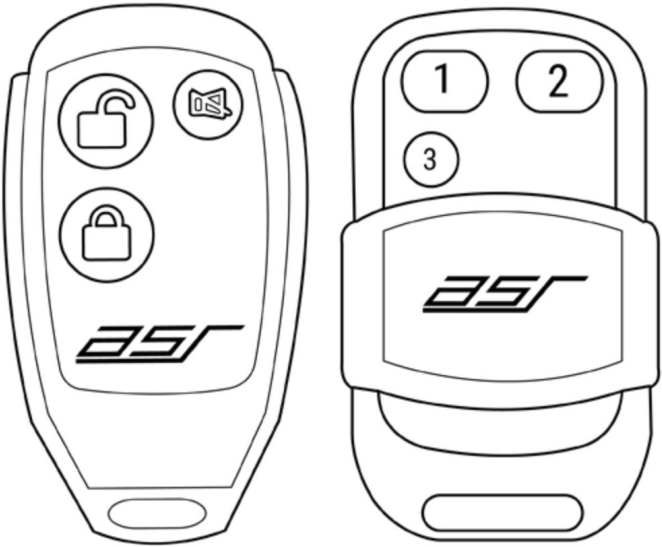

Flaps Open



Flaps Closed



Passthrough (Factory)

Start mode

The start mode describes in which mode the device should start after switching on the ignition. In the standard configuration, the device saves the last mode set and restores it when the vehicle is started. If you want a certain mode when starting, regardless of how you have parked your vehicle, this can be programmed.

The start mode can be freely programmed as required

Last state: Press the button for the "Sport mode" 5 times within 5 seconds.

Other modes: Press the button for the mode you want to teach in as the start mode for approx. 10 seconds.

The flaps open and close 5 times to confirm successful programming of the start mode.

Recommended: if wanting the flaps closed choose passthrough instead of Flaps Closed this will avoid the possibility of over revving the engine with the flaps closed.